

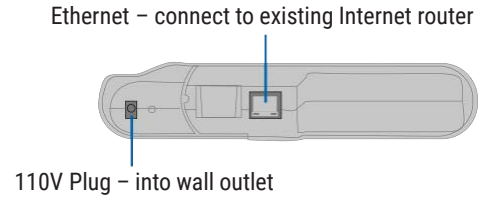
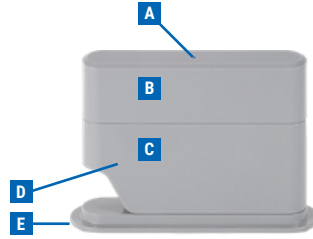
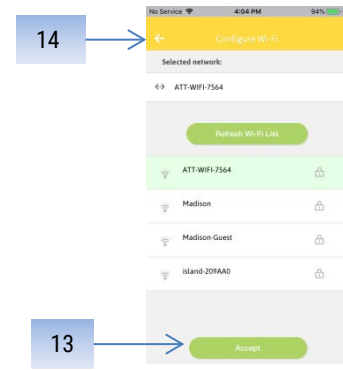
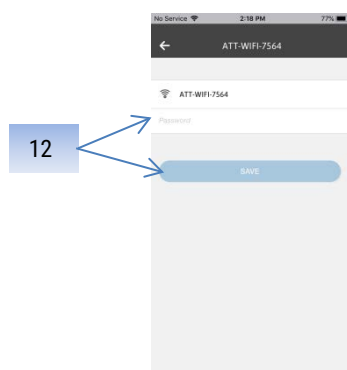
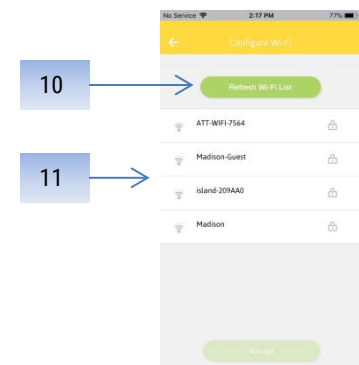
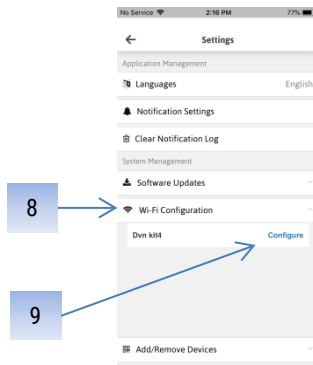


Communication Hub

- A. LED status light
- B. Upper cover
- C. Lower cover
- D. Power / Ethernet inputs (bottom of lower cover)
- E. Table stand (detachable)

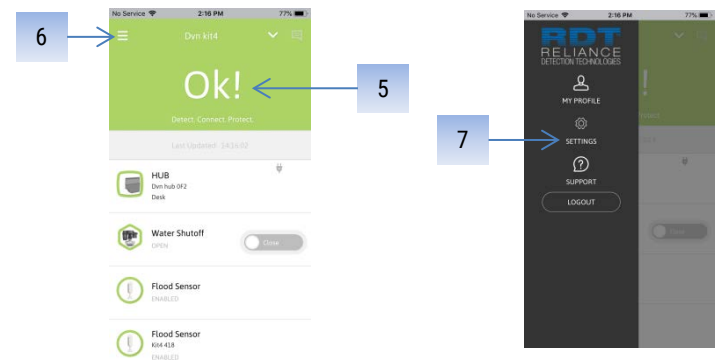

1. Ensure unit is setup properly and working (see Quick Start Guide).
2. Plug in live Ethernet connection (LED blinking blue).
3. Plug in 100V wall Adapter (LED blinking Green).
4. Log into RSC-900 App.
5. Confirm App screen show "Ok!".
6. Tap on Menu Icon in upper left corner.
7. Tap on "Settings" icon.
8. Select "Wi-Fi Configuration" Tab.
9. Select "Configure" option.
10. Tap on "Refresh Wi-Fi List".
11. Select Wi-Fi/Hotspot that you want to connect to from the list.
12. Enter Wi-Fi/Hotspot Password. And tap on "Save".
13. Once connected tap on "Accept" to complete setup.
14. Tap back arrow key to go back to main app page.
15. Remove wired Ethernet cable from the hub.
16. Test Wi-Fi setup by closing or opening the Water Shutoff Valve in the app.

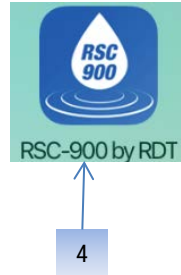

HUB INDICATOR LIGHT GUIDE:

- ◆ Rapid GreenOK
- ◆ BlueHub or device communication failure(s)
- ◆ RedHub or device low battery